

## 4-Post Lift Safety

Whenever you are maintaining and/or servicing the 4-Post Lift, you should mechanically secure it. Use the following procedure:

### ⚠️ WARNING ⚠️

- Only qualified and trained personnel should perform the disassembly and assembly of electrical and mechanical components.
- Before attempting any maintenance on this equipment all involved personnel should follow plant internal regulations along with any state, federal, or province regulations. Do not begin any repair procedure until the proper shutdown procedures and the appropriate power lockout procedures have been applied.

### Securing the 4-Post Lift

- 1 Raise the carriage assembly so that its locking slot aligns with the lock pin bracket.



- 2 Shutdown and lockout the 4-Post Lift according to plant lockout procedures.



- 3 Open the gate and move to the service platform.  
*Note: Opening the gate will trigger the machine to be placed in maintenance mode.*



- 4 Remove the safety pin from its stowed position on the lock pin bracket and completely insert it into the locking position. The end of the safety pin should protrude through the locking slot.

