

Docking Station Preventive Maintenance

- Before attempting any maintenance on this equipment all involved personnel should follow plant internal regulations along with any state, federal, or province regulations.
- The maintenance inspection, checks, and procedures listed in the preventive maintenance tables are assumed with the gated area electrically locked out.
- Before attempting any maintenance or service operation, make sure that:
 - You do not begin any repair procedure until the proper shutdown procedures and the appropriate power lockout procedures have been applied.
 - O The system is de-energized; main electrical switches are open.

(i) NOTICE (i)

The maintenance inspection, checks, and procedures listed in the preventive maintenance tables and corrective procedures should be performed when the equipment is immobilized and locked out.

This section contains preventive maintenance schedules with recommended lubrication intervals. Assemblies in this section include:

Skid Dolly Docking Station

Daily Checks

Observe

- Obvious signs of damage to the equipment. Listen to the conveyors an unusual sound like screeching, grinding, or whining, are indicators of a problem.
- Damage or noticeable wear on the carrying and guide rollers.
- Signs of oil leaks on the equipment or on the floor below any gearbox.

Evaluate

• If you notice any of the above issues, evaluate the cause and the risk involved.


Act

Schedule or perform necessary maintenance repairs as appropriate.



Mechanical Preventive Maintenance - key


Preventive Maintenance tables consists of:

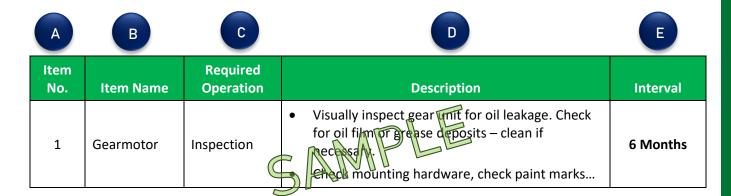

- A. Indicates the callout number associated on the schematic drawing, image or figure.
- B. Component name within the assembly.
- C. Required preventive maintenance operation i.e., inspection or lubrication.
- D. Detailed description of the operation(s) to be performed.
- E. Recommended frequency of PM task.



Docking Station Preventive Maintenance Items

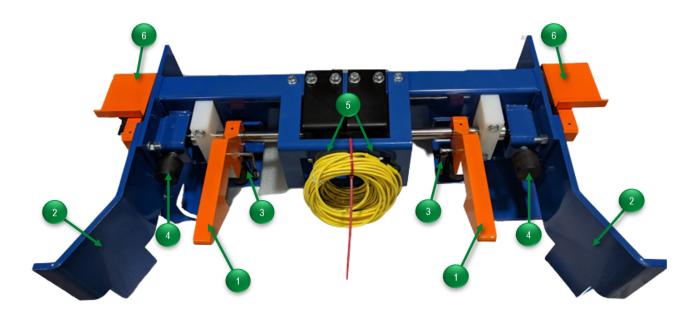

Item No.	Item Name	Required Operation	Description	Interval
1	Clamp Arm	Inspection	Check for excessive wear and damage.Check for proper function.	C Mantha
2	Side Plate	Inspection	Check for wear, damage, and secure mounting.	
3	Tension Spring	Inspection	Check for wear or damage, function control.	
4	Rubber Bumper	Inspection	Check for wear, damage, and secure mounting.	6 Months
5	Prox Switch	Inspection	Check for deformation and damage.	
6	Foot Pedal	Inspection	Check for excessive wear and damage.Check for proper function.	