

# Turn/Pivot Table Troubleshooting

This chapter includes general guidelines and troubleshooting tables as an aid in isolating and recovering from malfunctions. **ONLY QUALIFIED, AUTHORIZED PERSONNEL SHOULD OPERATE OR MAINTAIN EQUIPMENT.**

Proper troubleshooting is finding the cause of a problem and correcting it in a safe and systematic manner. A change in the system often causes trouble. An understanding of the system, its modes of operation, and how these modes are to work will aid in finding the cause of the trouble.


**WARNING**

- Ensure that all requisite safety precautions are taken while diagnostic procedures are performed.
- Before attempting any maintenance or service operation, make sure that:
  - You do not begin any repair procedure until the proper shutdown procedures and the appropriate power lockout procedures have been applied.
  - The system is de-energized; main electrical switches are open.
- Some maintenance/troubleshooting procedures require the equipment to be running to perform the procedure. In this case only one person should be in command of operating the equipment in maintenance mode only. Constant communication with the person commanding the equipment should be maintained through the procedure.

Problem	Possible Causes	Remedy
<b>Roller bed does not move</b>	Gearmotor does not run	<ul style="list-style-type: none"> <li>• Check wiring and plugs.</li> <li>• Gearmotor troubleshooting.</li> <li>• Replace motor.</li> </ul>
	IDC defective	<ul style="list-style-type: none"> <li>• Replace IDC.</li> </ul>
<b>Rotation speed too high / low</b>	IDC defective	<ul style="list-style-type: none"> <li>• Replace IDC.</li> </ul>
	Wheel block does not rotate	<ul style="list-style-type: none"> <li>• Replace wheel blocks.</li> </ul>
<b>Wrong pivot/turn table stop position</b>	Code rail reader programming wrong	<ul style="list-style-type: none"> <li>• Correct code rail reader programming.</li> </ul>
	Code rail reader defect	<ul style="list-style-type: none"> <li>• Replace code rail reader.</li> </ul>
<b>Noise with / without vibrations</b>	A main assembly is defective	<ul style="list-style-type: none"> <li>• Check all main assemblies for loose pieces and foreign parts.</li> </ul>
	Wheel blocks are not mounted in correct direction	<ul style="list-style-type: none"> <li>• Readjust wheel blocks.</li> </ul>


## Power Roll Bed Normal Application Troubleshooting

This chapter includes general guidelines and troubleshooting tables as an aid in isolating and recovering from malfunctions. **ONLY QUALIFIED, AUTHORIZED PERSONNEL SHOULD OPERATE OR MAINTAIN EQUIPMENT.**

Proper troubleshooting is finding the cause of a problem and correcting it in a safe and systematic manner. A change in the system often causes trouble. An understanding of the system, its modes of operation, and how these modes are to work will aid in finding the cause of the trouble.

### ⚡ ⚠ WARNING ⚠ ⚡

- Ensure that all requisite safety precautions are taken while diagnostic procedures are performed.
- Before attempting any maintenance or service operation, make sure that:
  - You do not begin any repair procedure until the proper shutdown procedures and the appropriate power lockout procedures have been applied.
  - The system is de-energized; main electrical switches are open.
- Some maintenance/troubleshooting procedures require the equipment to be running to perform the procedure. In this case only one person should be in command of operating the equipment in maintenance mode only. Constant communication with the person commanding the equipment should be maintained through the procedure.

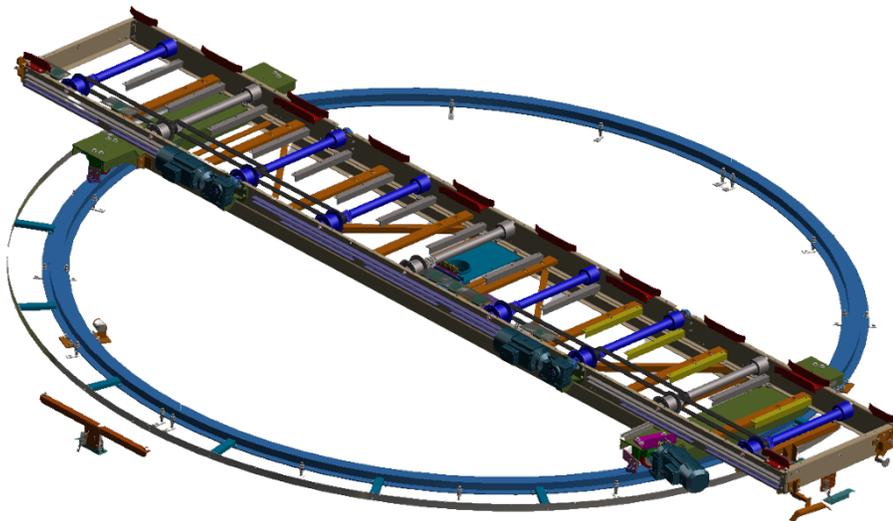

## Power Roll Bed Normal Application Troubleshooting

Problem	Possible Cause	Remedy
<b>Skid does not move</b>	Gearmotor does not run	<ul style="list-style-type: none"> <li>• Check wiring and plugs.</li> <li>• Gearmotor troubleshooting.</li> <li>• Replace gearmotor.</li> </ul>
	Broken toothed belts	<ul style="list-style-type: none"> <li>• Replace toothed belt.</li> </ul>
	Carrying rollers are soiled with oil	<ul style="list-style-type: none"> <li>• Clean rollers.</li> </ul>
	IDC defective	<ul style="list-style-type: none"> <li>• Replace IDC.</li> </ul>
	Proximity switch(es) defective or loose	<ul style="list-style-type: none"> <li>• Replace or readjust proximity switch.</li> </ul>
<b>Skid speed too high / low</b>	Malfunctioning control	<ul style="list-style-type: none"> <li>• Diagnostic program.</li> </ul>
<b>Wrong Skid stop position</b>	Wrong proximity switch position	<ul style="list-style-type: none"> <li>• Readjust proximity switch.</li> </ul>
<b>Noise with / without vibrations</b>	Loose parts	<ul style="list-style-type: none"> <li>• Check module for loose parts and parts that do not belong.</li> </ul>
	Worn belt	<ul style="list-style-type: none"> <li>• Replace toothed belt.</li> </ul>
	Bearings of carrying rollers defective or worn	<ul style="list-style-type: none"> <li>• Replace carrying rollers.</li> </ul>